 
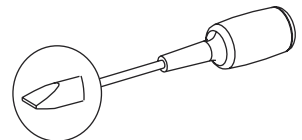 
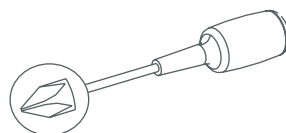 
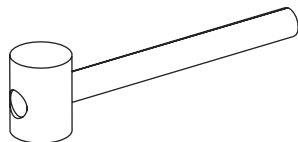 
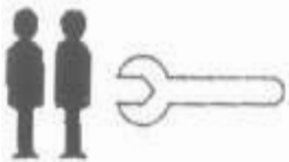 


- Ⓓ Aufbauanleitung  
Ⓕ Notice de montage  
Ⓖ Handleiding voor de montage  
Ⓒ Montážní návod  
Ⓗ Szerelési útmutató  
Ⓙ Montaj talimatları
- Ⓖ Assembly instruction  
Ⓘ Istruzioni di montaggio  
Ⓟ Instrukcja montażu  
Ⓚ Navod na montaž  
Ⓡ Instrucțiuni de montaj  
Ⓡ Инструкция по монтажу

# 36-4253-82-DOR

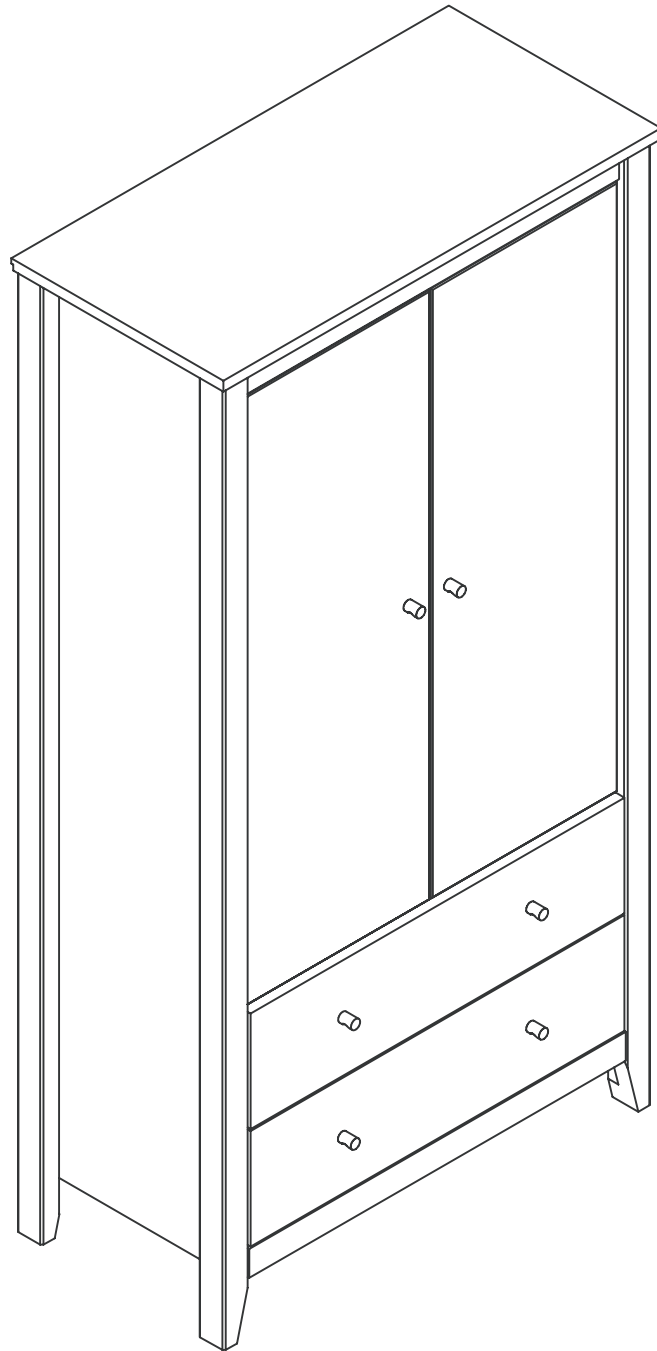

 
 
# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
18




Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

Typ • Type • Tip • Tipus • Druh • Тіро • Тип

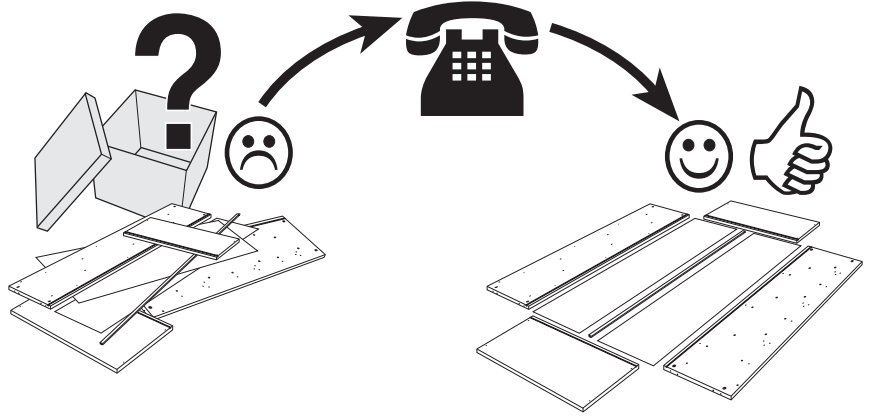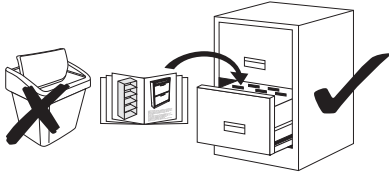

①	162221-82	x1
②	162221w-82	x1

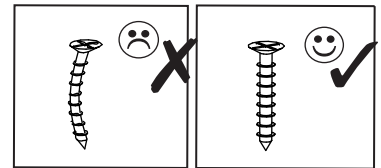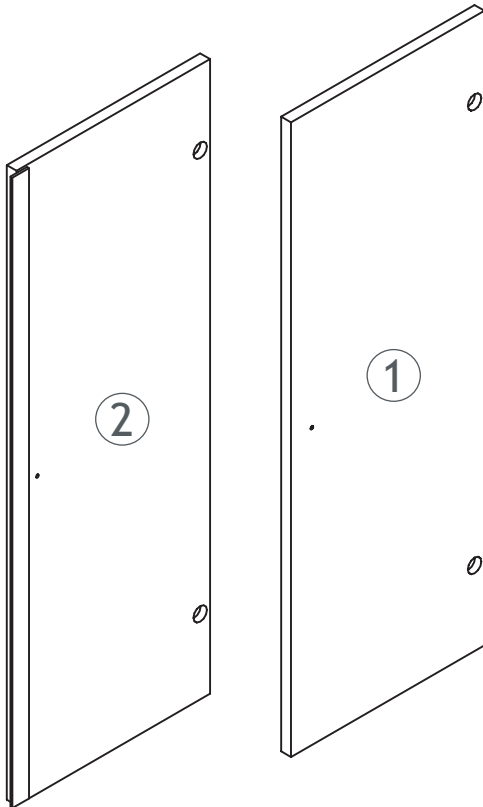   


a




b



 c




d

 


e

		mm	
a	1-000060-07	0	x2
b	1-000051-07	M4x23	x2
c	1-000093-07	3.5x15	x8
d	1-000059-07	D=26	x4
e	1-000052-07	18x25	x4

 
1-000001=

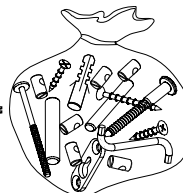

 
1.

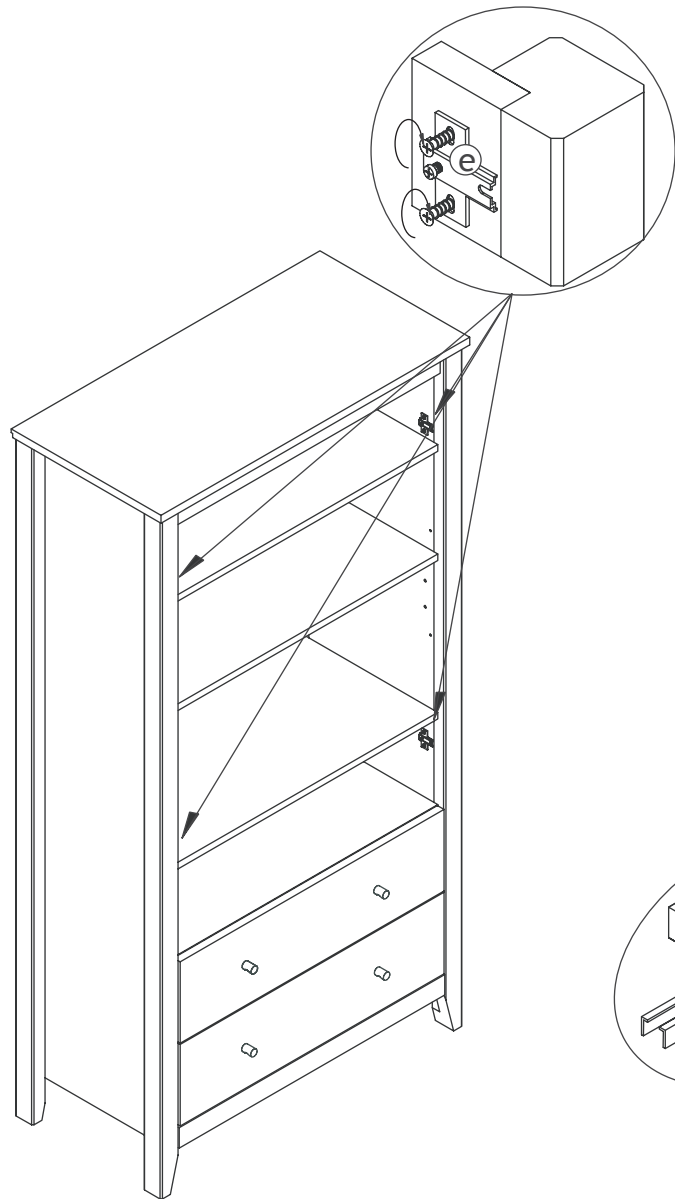

 
2.

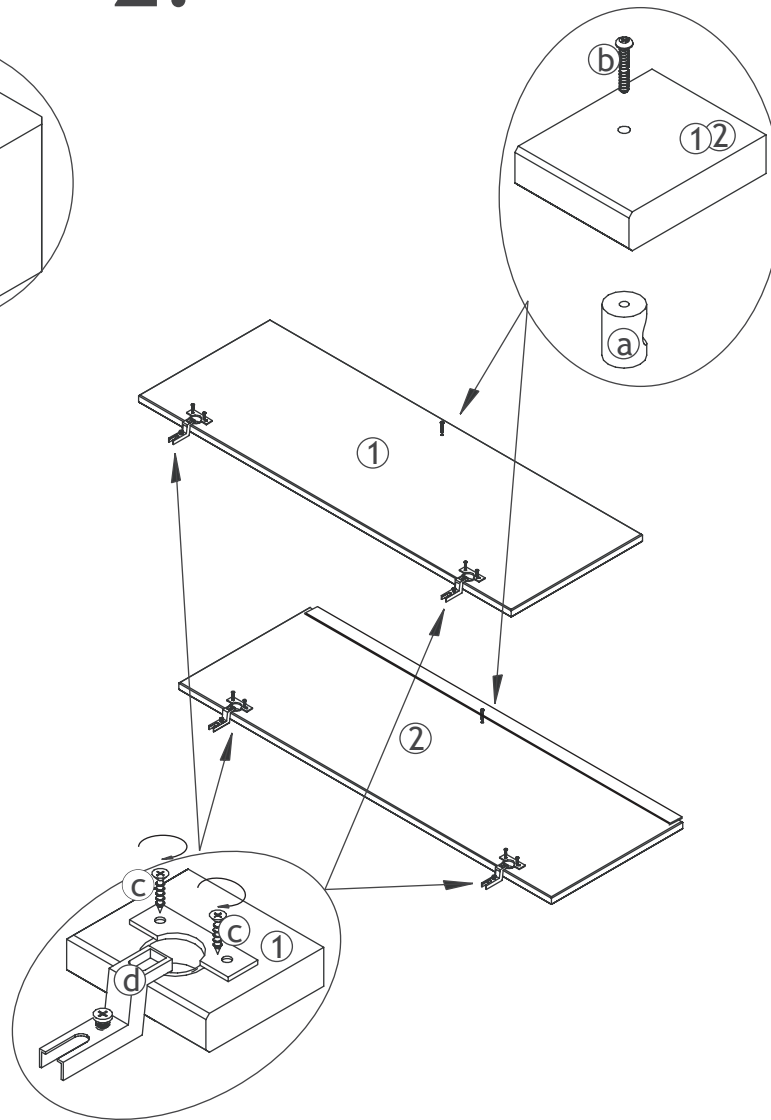

 3.

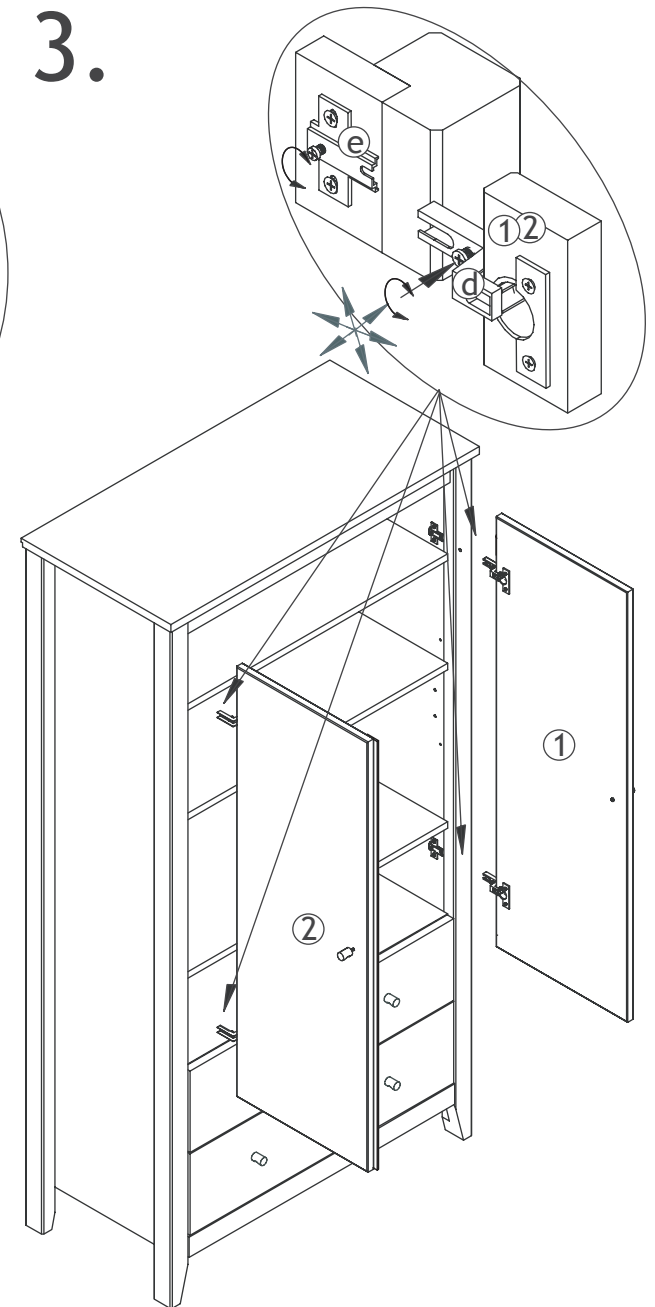

 4.1

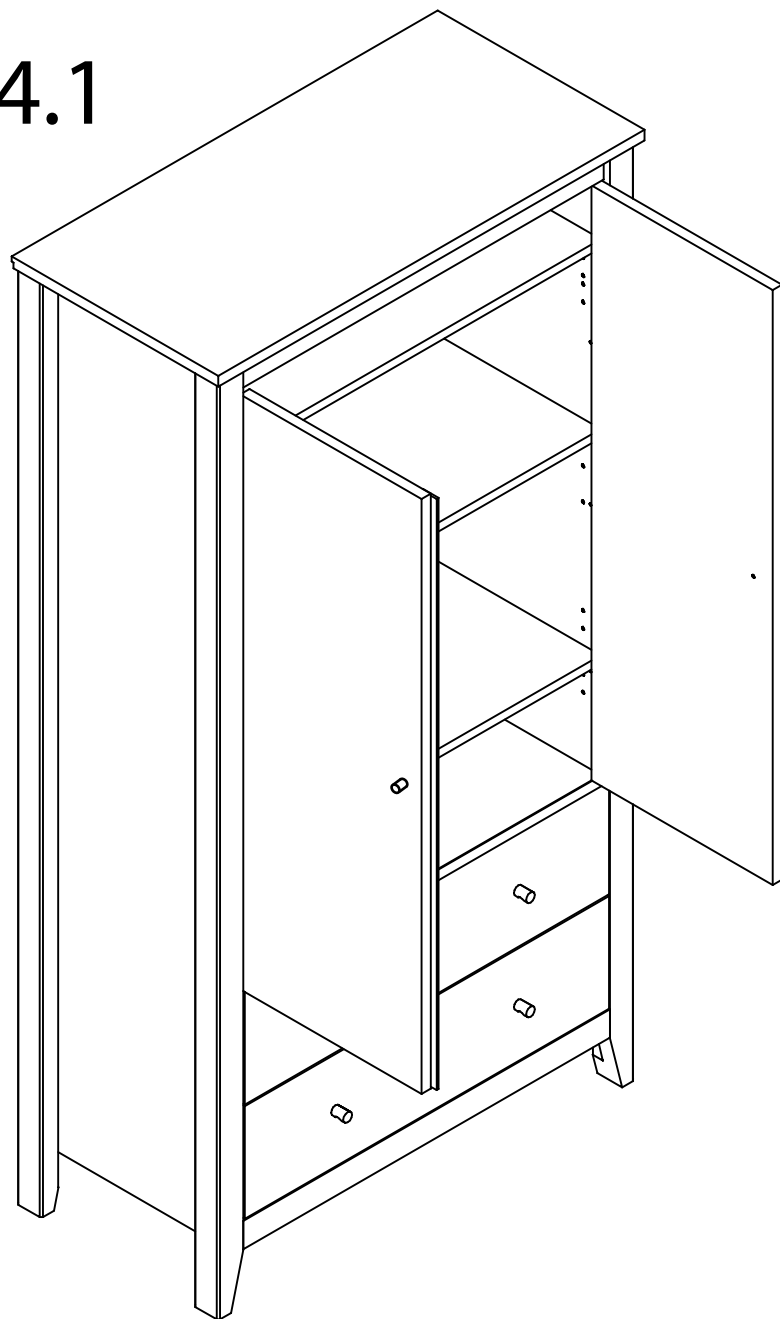

4.2.

